

## P&amp;WC PT6T-9 engine spare parts list

Item Number	Part Number	Description	CAGE CODE
1	3049000-01	ENGINE ASSEMBLY, TWINNED TURBOSHAFT, COMPLETE	00198
2	N/A	METALLIC CONTAINER FOR ENGINE ASSEMBLY, TWINNED TURBOSHAFT, COMPLETE	00198
3	3001957	SPRING-. 588X. 028X5 COILS	00198
4	3003988	WASHER-PL . 210IDX. 500 ODX. 043 THK	00198
5	3004904	RING-RETAINING, SPL INT. 665X. 035 THK	00198
6	3006505	VALVE-DRAIN, GAS GEN CASE	00198
7	3006718	PACKING MATERIAL FIRESEAL	00198
8	3008891	SPACER FLAT . 221X. 438X. 250	00198
9	3010880	GASKET-IGNITER	00198
10	3011072	GASKET, . 840X1. 070X. 051	00198
11	3011158	PLATE-LOCK, FUEL MANF XFR TUBE	00198
12	3011178	RIVET-BLIND, . 125X. 125 GRIP, UNIV SCD	00198
13	3011519	SEAL FUEL LINES	00198
14	3012675	NUT OPTION (IC)	00198
15	3012680	NUT OPTION (IC)	00198
16	3014436	SPRING-HLCL, CPRSN, . 926X. 076X8 COILS	00198
17	3014791	SPRING-HLCL, CPRSN, . 572X. 072X14 COILS	00198
18	3014893	PLATE-SEAL RET, PRESS LINE	00198
19	3014895	SEAL-PRESSURE LINE	00198
20	ST3325-01	SCREW-MACHINE, CTSK, SLOT	00198
21	3015399	CARRIER-OIL SEAL	00198
22	3015863	CARRIER-OIL SEAL, 1. 4375 ID	00198
23	3015871	CARRIER-OIL SEAL, 1. 680	00198
24	3016188	TUBE-AIR PRESSURE, P3, ASYO	00198
25	3016267	SEAL-NO 2 BEARING SCAVENGE LINE	00198
26	3016454	SEAL-REDUCTION GEARBOX SCAVENGE TUBE	00198
27	3016598	WASHER KEY	00198
28	3016606	NUT OPTION (IC)	00198
29	3016607	NUT OPTION (IC)	00198
30	3016608	NUT OPTION (IC)	00198

P&WC PT6T-9 engine spare parts list

Item Number	Part Number	Description	CAGE CODE
31	3016609	NUT OPTION (IC)	00198
32	3016634	NUT OPTION (IC)	00198
33	3016958	RETAINER-PACKING, . 646X. 0725X. 160	00198
34	3016964	RETAINER-PACKING, . 774X. 0725X. 160	00198
35	3016986	SCREW-MACH, . 190-32JX. 740, FLAT, CSK	00198
36	3017075	RETAINER, PKG, . 447X. 076X. 158	00198
37	3017804	RING-PLASTIC, 1. 021 X 1. 2195 X . 125	00198
38	3017805	RING-PLASTIC, . 754 X. 978 X. 125	00198
39	3018186	TUBE-PRESSURE OIL TO COOLER, ASYO	00198
40	3018190	RING-PLASTIC, 1. 022 X1. 318 X. 125	00198
41	3018191	RING-PLASTIC, . 922 X1. 218 X. 125	00198
42	3018194	SEAL-PRESS & SCAV LINES	00198
43	3018505	BOLT-MACH, . 190-32JX. 500, DR HEX	00198
44	3019148	RING-PISTON, 3. 130 X. 110 X. 115	00198
45	3020030	TUBE-TRANSFER, FUEL MANIFOLD	00198
46	3020357	WASHER-KEY, 1. 410IDX1. 890DIAX. 041	00198
47	3020618	PLUG-RELIEF VALVE BALL RETAINING	00198
48	3021151	PACKING-PREFORMED, 2. 680X3. 120X. 217	00198
49	3022117	BOLT-MACH, . 3125-24UNFX. 275, HEX	00198
50	3022375	SEAL-PL, . 865 SFT DIAX1. 3805X. 312	00198
51	3023699	BOLT-BLEED AIR CASE CLAMP	00198
52	3023725	SPRING-FINGER VALVE, P3	00198
53	3024731	STRAINER ELEMENT-SLV, FUEL MANF	00198
54	3026560	NOZZLE, FUEL	00198
55	3029477	WASHER-KEY, . 392X. 566X. 0405	00198
56	3029566	GASKET-FUEL NOZZLE SHEATH	00198
57	3029723	SPRING-HLCL, CPRSN, . 660X. 100X17. 1 CLS	00198
58	3030367	CLAMP-LOOP, . 500	00198
59	3032096	IGNITER (IC)	00198
60	3034743	FILTER ELEMENT OPTION (IC)	00198

P&WC PT6T-9 engine spare parts list

Item Number	Part Number	Description	CAGE CODE
61	3035889	EXCITER, IGNITION	00198
62	3036376	FILTER ELEMENT OPTION (IC)	00198
63	3036526	SEAL OPTION (IC)	00198
64	3039408	SEAL-PL, .9375 SFT DIAX1.4375X.312	00198
65	3039943	GASKET-3.180, 4 HOLE	00198
66	3039944	GASKET-OIL LEVEL INDICATOR	00198
67	3044899-03	SWITCH-IMPENDING BY-PASS	00198
68	3045452-02	DETECTOR-CHIP, MAGNETIC, 30K RESISTOR	00198
69	3045453-01	VALVE-CHIP DETECTOR, SELF CLOSING	00198
70	3049038-03	VALVE ASSY, COMPRESSOR BLEED	00198
71	3049260-03	TRANSDUCER-TORQUE PRESSURE	00198
72	3049261-04	WIRING-HARNESS, T1 SENSOR	00198
73	3049386-02	HEATER, OIL-TO-FUEL	00198
74	3050848-01	STRAP-TIE DOWN	00198
75	3054520-01	ADAPTER ASSY, FUEL MANIFOLD, INLET	00198
76	3054522-01	ADAPTER ASSY, FUEL MANIFOLD	00198
77	3054717-01	STATOR, ALTERNATING CURRENT GENERATING	00198
78	3054718-02	SPEED SENSOR AND PROBES	00198
79	3054720-02	SPEED SENSOR AND PROBES	00198
80	3055601-01	WIRING HARNESS (IC)	00198
81	3058243-01	TUBE ASSEMBLY-FLANGED, OIL FILLER	00198
82	3058994-01	SEAL-FACE, 2.660X3.500X.813 (IC)	00198
83	3059779-01	FILTER ELEMENT OPTION (IC)	00198
84	3072234-01	SCREEN-AIR INLET, ASSY OF	00198
85	3072827-01	GASKET-3 HOLES, 1.050 DIA	00198
86	3072828-01	GASKET-4 HOLES, 1.030 DIA	00198
87	3072829-01	SEAL-VAPOR	00198
88	3072830-01	INSULATION-FIRESEAL	00198
89	3072833-01	PLATE-SEAL RETAINING	00198
90	3072834-01	PLATE-SEAL RETAINING	00198

## P&amp;WC PT6T-9 engine spare parts list

Item Number	Part Number	Description	CAGE CODE
91	3078977-01	SPACER-RING, .500X1.8125X.0575	00198
92	3079229-01	SHEATH-FUEL NOZZLE	00198
93	3100579-01	BUSHING-SLEEVE, FLANGE	00198
94	3100579-02	BUSHING-SLEEVE, FLANGE	00198
95	ST3291-01	WASHER-KEY	00198
96	3102950-01	GASKET-.500, 2 HOLE	00198
97	3103067-01	DECAL-OIL TANK	00198
98	3106692-01	INSULATOR-THERMOCOUPLE	00198
99	3112467-01	WASHER-TAB, LOCK WIRE	00198
100	3112856-01	INSULATION-2 HOLE, FIRESEAL	00198
101	3114414-01	CARRIER OIL SEAL	00198
102	3115091-01	BALL, PLASTIC	00198
103	3115929-01	GASKET OIL LEVEL INDICATOR	00198
104	3115931-01	GASKET-.630 DIA, 2 HOLE	00198
105	3116347-01	WASHER-FL .100X.240X.025 THK	00198
106	3116632-01	GASKET-5.000 BOLT CIRCLE, 4 HOLE	00198
107	3117189-01	INSULATION-SEAL RETAINING PLATE	00198
108	3117191-01	INSULATION-SEAL RETAINING PLATE	00198
109	3117192-01	INSULATION-SEAL RETAINING PLATE	00198
110	3117193-01	INSULATION-SEAL RETAINING PLATE	00198
111	3117194-01	INSULATION-SEAL RETAINING PLATE	00198
112	3118020-01	INSULATION-SEAL RETAINING PLATE	00198
113	3118024-01	SEAL-AIR LINES & PUSH-PULL CASING	00198
114	3118962-01	GASKET-.930 ID, 2 HOLE	00198
115	3119096-01	LEAD-THERMOCOUPLE, NEGATIVE	00198
116	3119097-01	LEAD-THERMOCOUPLE, POSITIVE	00198
117	3119829-01	CABLE ASSY, IGNITION EXCITER TO IGNITER	00198
118	3119854-01	WASHER, KEY, FUEL NOZZLE SEALING	00198
119	3120483-01	FLOW DIVIDER AND DUMP VALVE	00198
120	3120484-01	WIRING HARNESS-T5 THERMOCOUPLE	00198

## P&amp;WC PT6T-9 engine spare parts list

Item Number	Part Number	Description	CAGE CODE
121	3122867-01	SEAL-PLAIN, 1.1875 SHAFT DIA	00198
122	ST1140-25	GASKET OPTION (IC)	00198
123	ST1478-04	CLAMP-LOOP, CUSHION, .250	00198
124	ST1478-06	CLAMP-LOOP, CUSHION, .375	00198
125	ST1478-07	CLAMP-LOOP, CUSHION, .438	00198
126	ST1478-08	CLAMP-LOOP, CUSHION, .500	00198
127	ST2231-04	CLAMP-LOOP, CUSHION, .250	00198
128	ST2231-05	CLAMP-LOOP, CUSHION, .375	00198
129	ST2231-06	CLAMP-LOOP, CUSHION, .375	00198
130	ST2231-08	CLAMP-LOOP, CUSHION, .500	00198
131	ST2231-10	CLAMP-LOOP, CUSHION, .625	00198
132	ST2231-12	CLAMP-LOOP, CUSHION, .750	00198
133	ST3023-03	GROMMET-RUBBER, GROOVE, .188	00198
134	ST3030-09	NUT OPTION (IC)	00198
135	ST3277-01	GASKET-3.344 4 HOLES	00198
136	ST3278-01	GASKET-5.000 BOLT CIRCLE, 6 HOLE	00198
137	ST3391-06	NUT-SELF LOCKING (ELECTRICAL), 8-32	00198
138	ST3391-09	NUT-SELF LOCKING (ELECTRICAL), 10-32	00198
139	ST6544-09	NUT OPTION (IC)	00198